

HYPERION FLOOD LIGHTS





VOLTS	100–240V AC 50/60Hz input
POWER FACTOR	>0.95 (13W >0.90)
OPERATING TEMP.	-20°C ~ +40°C
BEAM ANGLE	120° <i>Asymmetrical option available in 50–200W</i>
HOUSING	ADC12 aluminium with type 316 stainless steel screws and bolts NZ laboratory 1000hr salt spray test
FINISH	Black Interpon PZ660 double powder-coated
MOUNTING	4mm black powder-coated aluminium U-bracket
INGRESS PROTECTION	IP66
IK RATING	IK08
CONNECTION METHOD	2m double-insulated 3-core flex
CONTROL	Non-dimmable
WARRANTY	5 years
COMPLIANCE	

MODEL	CODE	LED WATTS	SYSTEM WATTS	LUMENS	EFFICACY	DIMENSIONS EXCL. BRACKET	DIMENSIONS INCL. BRACKET	WEIGHT
13W	BL-CS-1100-NW	11.2W	13.4W	1320lm	110lm/W	W135 × H175 × D42mm	W150 × H205 × D42mm	1.03kg
26W	BL-CS-1101-NW	23.5W	26W	2640lm	110lm/W	W170 × H220 × D45mm	W200 × H251 × D45mm	1.87kg
50W	BL-CS-1102-NW	45.7W	50W	5700lm	114lm/W	W225 × H290 × D55mm	W243 × H330 × D55mm	3.08kg
75W	BL-CS-1103-NW	68.8W	75W	8280lm	115lm/W	W250 × H330 × D75mm	W265 × H372 × D75mm	4.8kg
120W	BL-CS-1104-NW	108W	120W	13,800lm	115lm/W	W340 × H400 × D90mm	W360 × H450 × D90mm	7.5kg
150W	BL-CS-1105-NW	138W	150W	17,250lm	115lm/W	W340 × H400 × D90mm	W360 × H450 × D90mm	7.5kg
200W	BL-CS-1106-NW	186W	200W	23,000lm	115lm/W	W340 × H400 × D90mm	W360 × H450 × D90mm	7.8kg

BRACKET MOUNTING & CONNECTION INSTRUCTIONS

- STEP 1: Open the packaging and check the product. In case of any damage, contact Bright Light.
- STEP 2: Fasten the bracket onto flood light with screws provided.
- STEP 3: Adjust the flood light to direct the light in the desired direction before tightening the screws.
- STEP 4: Be sure to connect the cable correctly. Brown–Live, Blue–Neutral, Yellow/Green–Ground.
- STEP 5: Switch the voltage on and check to see that the flood light works properly.

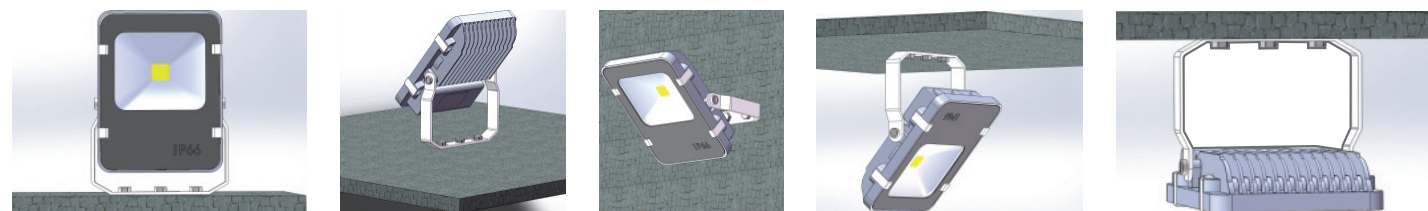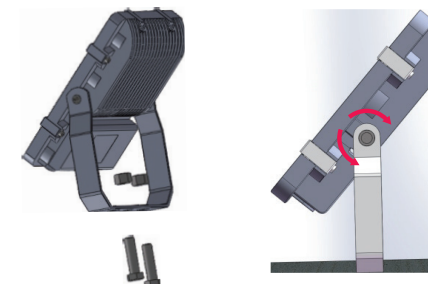

CAUTION

- Installation and maintenance must be performed by professionals only.
- Please ensure the holder is strong enough and the screws are tightened.
- The ground wire must be securely connected.
- Please make sure the lamp is working with correct input voltage.
- Cut off the power before maintenance.
- Do not use chemicals or corrosive cleaner to clean the fixture.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by Bright Light or a similar qualified person in order to avoid a hazard.